



Netcom

For more information and technical specifications: www.gnnetcom.com

CORPORATE HEADQUARTERS 77 Northeastern Blvd. Nashua, NH • 03062 1-800-826-4656 1-603-598-1100 Fax: 1-603-598-1122

Com	ponents	Funct	
1.	Lifter Arm Height Control	1.	Lif
2.	Lifter Arm		rai: if i
3.	Ring Sensor Platform	5.	Rir
4.	Ring Sensor		ha th€
5.	Ring Sensitivity LED/Online Indicator	8.	Rir
6.	Power Cord		Rir is c
7.	AUX Plug		
8.	Ring Sensor On/Off Button		
9.	Ring Sensitivity Knob		
10.	External Sensor Port		
11.	External Sensor		
12	Velcro		

12. Velcro

User Guide

Remote Handset Lifter (RHL)

0001 ND

© 2002 GN Netcom, Inc. • All rights reserved.


54-0314A • Printed in China


tions/Indicators

ifter Arm Height Control: Position toward the "+" to aise the lifter higher and toward the "-" to lower the lifter it is too high.

ing Sensitivity LED/Online Indicator: Lights when the andset is lifted and you have clear dialtone; flashes when he Ring Sensor Power Button is disabled.

ing Sensor On/Off Button: Press to disable the Ring Sensor if using the speakerphone when your phone s connected to a wireless headset Beltpack system.

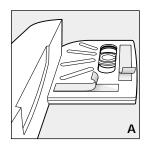

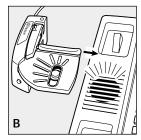

 \bigcirc

A. Remove the protective backing from the adhesive pads on the bottom of the Ring Sensor Platform (Velcro is

Affix the Ring Sensor

Platform to the

telephone.

provided as an an alternate securing option). **B.** Locate your

telephone's speaker (in most cases it is located under the telephone's handset).

C. Align the top of the Platform with the bottom edge of the telephone hookswitch well and locate the Ring Sensor to cover the telephone's speaker. Affix the Platform firmly to your telephone. Slide the Ring Sensor to position it over the middle of the telephone speaker.

If your telephone's

Sensor. Remove the

speaker is not under the

handset, use the External

rubber cover and plug the

External Sensor into the


External Sensor Port. Peel

the tape backing off the

External Ring Sensor and

attach it over the speaker.



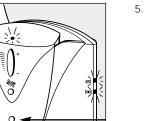

Press the Handset Lifter Button* on your Beltpack or Headset to put the wireless system in Headset Mode and activate the Lifter. The Lifter may take a moment to respond.


4. Put your headset on.

- The Lifter Arm will raise the handset and you will hear dialtone. The Ring Sensitivity LED lights while your handset is lifted and your have clear dialtone.
- C2
- If you do not hear dialtone, adjust the height of the Lifter Arm by moving the Height Control towards "+" to raise the arm. Moving the Height Control towards " -"


lowers the arm.


Adjust the Ring Sensor Sensitivity by turning the knob clockwise to increase the sensitivity and counterclockwise to decrease the sensitivity. While the phone is ringing, turn the knob until the Ring Sensor LED lights. Stop turning as soon as the LED lights for optimal performance.

Using the System

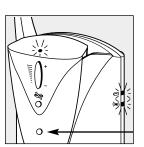



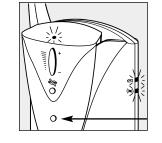

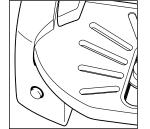



2. The Remote Handset

Lifter lifts your handset

and connects the call

through your headset.

- When using the 4 speakerphone feature on your telephone, press the Ring Sensor On/Off Button to disable it. When disabled, the Ring Sensitivity LED rapidly flashes.

1. When you hear a ring tone from your Beltpack (Beltpack systems only) or in your Headset, press the Handset Lifter Button on your wireless system's remote device.


the instructions that came with your phone system. What should I do if I hear a signal in my headset, but no call comes through?

• The Ring Sensor may be picking up electronic "noise." Move your telephone and/or wireless system away from electronic equipment, such as a computer monitor, fluorescent desk lamp, etc.


• Lower the Ring Sensor's sensitivity, by turning the adjustment knob counterclockwise.

What should I do if calls are coming in, but I don't hear a signal in my headset or from my beltpack?

What should I do if my Online Indicator doesn't light when I'm on a call? • Adjust the Ring Sensor's sensitivity. While on a call, turn the Ring Sensitivity Knob clockwise (only slightly) until the light comes on.

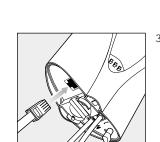

Connect the Remote Handset Lifter to your wireless system. Insert the AUX Plug into the large port marked AUX on the base of your wireless headset system (you will need to remove the Stand to access this port).*

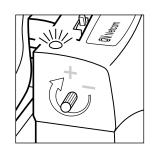

* Refer to the instructions that came with your wireless headset system for location of buttons and functions.

What should I do if the Remote Handset Lifter is not lifting the handset?

 Check the cable connection between the Lifter and the base of your wireless headset system. • Make sure there is power to the wireless system.

What should I do if I can't hear the dial tone? • The Lifting Arm height. may need to be slightly higher. Move the Height Control toward the "+" to raise the arm higher.

• If the Remote Handset Lifter is installed on a key system telephone (where you have to push a button to connect to a line), the "Auto Line Selector" feature of your phone system must be reprogrammed. Refer to

• Make sure the Ring Sensor On/Off Button is on. If the red Ring Sensitivity LED is flashing, the Ring Sensor is off. Press the button on the front of the Lifter to reactivate. Make sure the Ring Sensor is located over the telephone's speaker.

• Adjust the Ring Sensor's sensitivity. While the phone is ringing, turn the Ring Sensitivity Knob until the Ring Sensor LED lights. Stop turning as soon as LED lights for best performance.

How do I stop my Headset/Beltpack from signaling I have a call when I use my telephone's speakerphone? • Turn the Ring Sensor off (the LED will flash rapidly when off). Turn it back on when you've finished your speakerphone call.